



STURM, RUGER & Company, Inc.

Southport, Connecticut 06890 U.S.A. • www.ruger.com

ALL RUGER FIREARMS ARE DESIGNED AND MANUFACTURED IN OUR OWN FACTORIES IN THE UNITED STATES OF AMERICA

INSTRUCTIONS FOR USING HIGHER CAPACITY MINI-14[®] MAGAZINES



Be sure the muzzle of the rifle is pointing in a safe direction.

PLEASE NOTE: The Mini-14 magazine is not inserted or removed with a straight “up” and “down” procedure. Rather, the magazine must be inserted at an angle and then locked into place by rocking it in, front to rear, and removed by rocking it out, rear to front. Also, for higher capacity magazines (10-, 20-, or 30-round), relatively higher amounts of force may be required.

INSERTING THE MAGAZINE - Holding the magazine at the angle shown in Figure 1, insert the magazine into the magazine well as shown in Figure 2. As the small hole in the front of the magazine rides over the locating pin in the front of the magazine well in the receiver, you should both feel and hear the locating pin snap into the hole in the front of the magazine.

Once the front of the magazine is firmly seated, rotate (or rock) the bottom of the magazine to the rear as shown in Figure 3, until you both hear an audible click and feel the magazine positively engage the magazine catch in the rear of the magazine well. (See Figure 4.)

Once seated, test the magazine engagement by both rocking, forward and rearward, and pulling down, to ensure full engagement of the magazine within the magazine well.

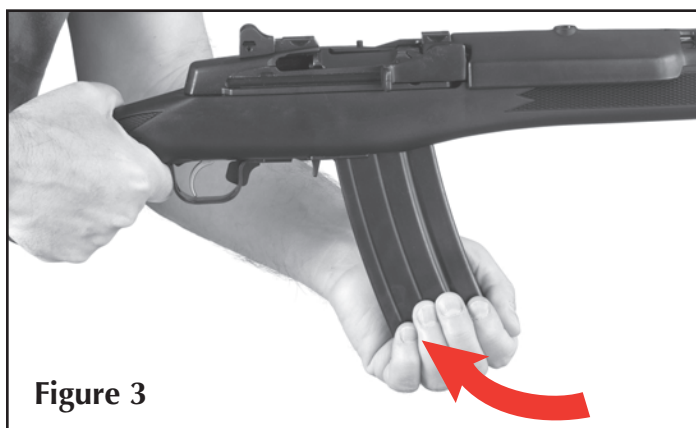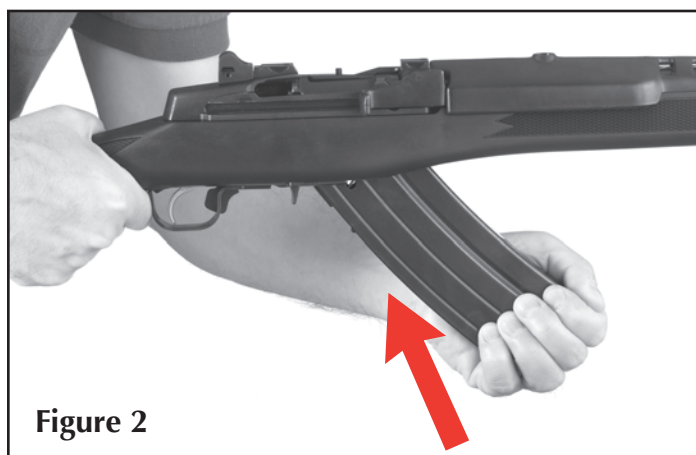

— See Other Side For Instructions On Removing The Magazine —

REMOVING THE MAGAZINE - Push and hold the magazine release lever forward, while rotating (or rocking) the bottom of the magazine forward, until the rear of the magazine is released from the rear of the magazine well. (See Figure 5.) Still holding the release lever forward, continue to rotate the bottom of the magazine forward, while pulling down, until the magazine is completely free of the magazine well. (See Figure 6.) If the release lever is not held forward after the rear of the magazine is released, the magazine can still be removed, but it will require considerably more force to disengage the magazine from the front of the magazine well.

